


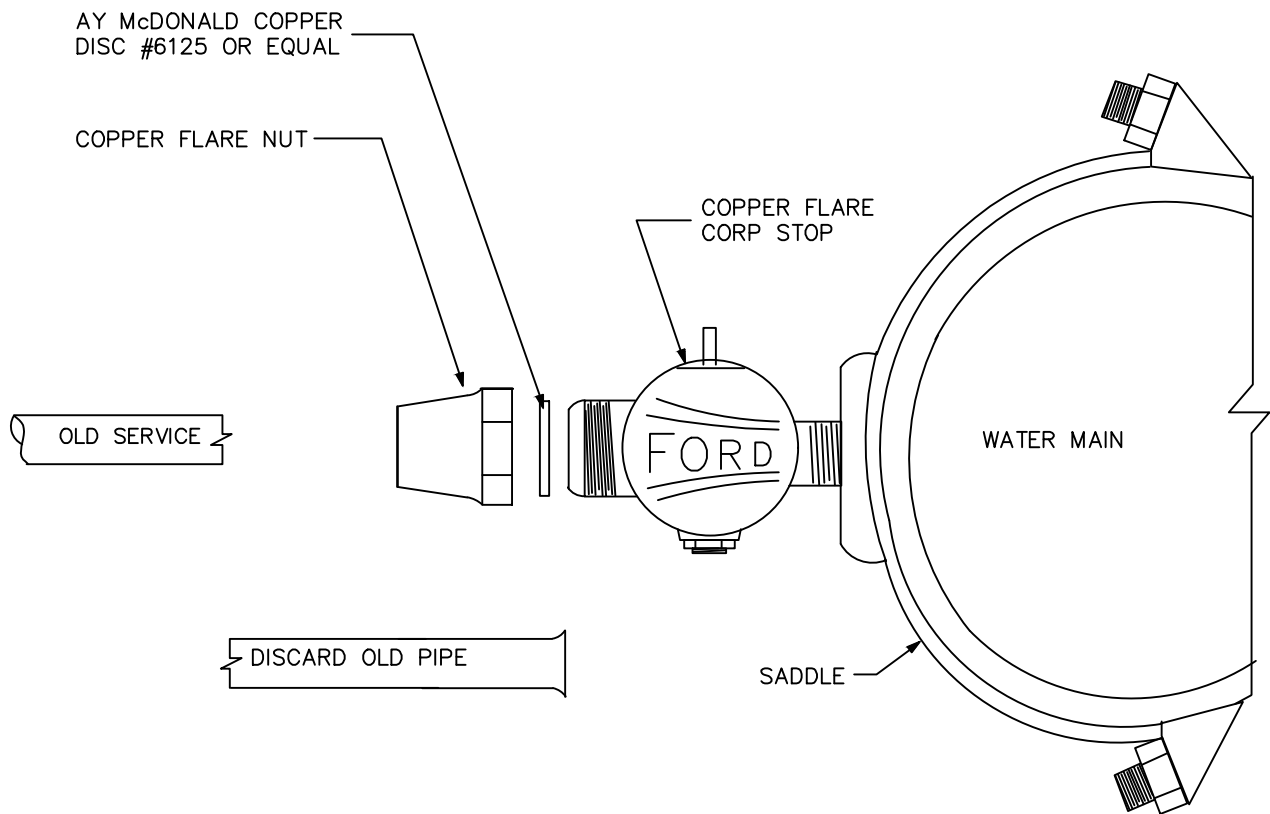

1. Turn off corp stop.
2. Cut existing copper pipe 12" from corp stop, loosen and remove flare nut, remove and discard copper pipe.
3. Insert a copper disc #6125 into flare nut, reconnect and tighten as necessary to seal.
4. If corp leaks slightly, gently tighten bottom nut to seal.



CITY OF COEUR D'ALENE STANDARD DRAWING

SERVICE ABANDONED AT CORP STOP – COPPER

APPROVED BY:

Chris Bosley
CITY ENGINEER, PE 10604

10/1/24
DATE:

DWG NO.

W-40